



by aliaxis

PE Tapping Saddles

Procedure


Installation

There are two types of products with specific methods.

Please ensure you follow the correct procedure.

- Rural Tapping Saddles
- Metric Saddles


Joining Method - Rural Tapping Saddles

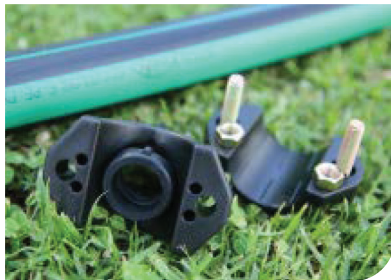


1. Insert the rubber seal into the saddle top by aligning the lug on the outside of the seal with the slot in the saddle.




2. Insert the bolts into the saddle bottom and push firmly into the hex recess.

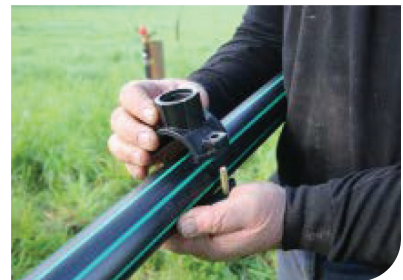

3. Assemble the saddle halves in the desired location on the Rural poly pipe.

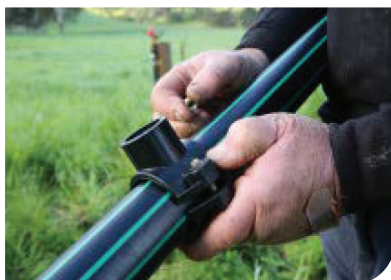

4. Thread each nut onto the bolt until firm and then complete tightening with a spanner.

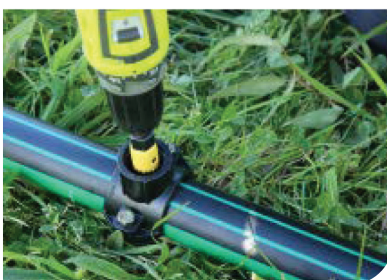

5. Drill a hole using the correctly sized drill bit taking care not to damage the seal or thread.



6. Connect the desired threaded fitting to the outlet using PTFE tape.

NOTE: Following installation, the line should be thoroughly flushed to remove any swarf created from drilling the holes.

Quick Installation Guide

PE Tapping Saddles

Use

Can be used to fit a wide range of pipes from PN6.3 to PN16 including MDPE, HDPE, PP or ABS that have metric external diameter dimensions.

Pre Assembly

Select branch off-take position, clean pipe, ensure easy access and mark hole. Place saddle upper body and align outlet branch with marked hole.

Assembly

Place saddle lower body over pipe. Ensure thread of bolts are clean before placing in saddle. Tighten all bolts alternately around saddle. ensure saddle off-take hole stays in alignment with marked hole.

Drill suitable sized hole through orifice of saddle with boring tool. Ensure that the threads and gasket are not damaged.

Disassembly

Loosen and detach all bolts around saddle.



Note:

1. Philmac recommends the use of PTFE tape on BSP threads to ensure a positive seal.
2. Philmac uses 316 high class Stainless Steel nuts and bolts. Inherent in the nature of all Stainless Steel nuts and bolts is that they can fuse following installation. Lubrication of threads before installation may help to prevent this occurring.

Limitation of Liability

This product catalogue has been compiled by Vinidex Pty Limited ("the Company") to promote better understanding of the technical aspects of the Company's products to assist users in obtaining from them the best possible performance.

The product catalogue is supplied subject to acknowledgement of the following conditions:

1 The product catalogue is protected by copyright and may not be copied or reproduced in any form or by any means in whole or in part without prior consent in writing by the Company. 2 Product specifications, usage data and advisory information may change from time to time with advances in research and field experience. The Company reserves the right to make such changes at any time without further notice. 3 Correct usage of the Company's products involves engineering judgements, which can not be properly made without full knowledge of all the conditions pertaining to each specific installation. The Company expressly disclaims all and any liability to any person whether supplied with this publication or not in respect of anything and all of the consequences of anything done or omitted to be done by any such person in reliance whether whole or part of the contents of this publication. 4 No offer to trade, nor any conditions of trading, are expressed or implied by the issue of content of this product catalogue. Nothing herein shall override the Company's Condition of Sale, which may be obtained from the Registered Office or any Sales Office of the Company. 5 This product catalogue is and shall remain the property of the Company, and shall be surrendered on demand to the Company. 6 Information supplied in this product catalogue does not override a job specification, where such conflict arises; consult the authority supervising the job. © Copyright Vinidex Pty Limited.